



MD380L

Open Loop Elevator Drive

Quick Start Manual


V0.5
Data Code: 19010299

Contents

1	Product information.....	1
1.1	Nameplate	1
1.2	Designation rule.....	1
1.3	General specifications	2
2	Wiring.....	3
2.1	Typical wiring 1 (use multi-reference input as frequency reference).....	3
2.2	Typical wiring 2 (use analog input as frequency reference).....	4
2.3	Terminal description	5
2.4	Extension I/O card MD38IO1	7
3	Operation panel.....	9
3.1	Get familiar with operation panel	9
4	Quick setup	12
4.1	Complete timing diagram for normal travel (use multi-reference as frequency reference).....	12
4.2	Elevator performance fine tuning	14
4.3	Setup flowchart.....	16
4.4	IGBT Enable.....	21
5	Function code table	23
5.1	Group F0: fundamental.....	23
5.2	Group F1: motor 1 parameters	24
5.3	Group F2: vector control	25
5.4	Group F3: VF control	26
5.5	Group F4: input terminals	27
5.6	Group F5: output terminals	29
5.7	Group F6: start and stop control	30
5.8	Group F7: product and software version checking.....	30
5.9	Group F8: auxiliary functions	31
5.10	Group F9: fault and protection	31
5.11	Group FC: multi-reference	32
5.12	Group FF: drive parameters.....	32
5.13	Group FP: function code management	33
5.14	Group A5: control optimization.....	33
5.15	Group U0: monitoring	33
6	Trouble shooting.....	34
6.1	Inverter fault codes	
6.2	Inverter common symptoms and diagnostics.....	
	Revision History	

1 Product information

1.1 Nameplate

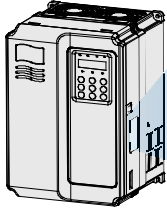


Nameplate

AC drive model → MODEL: MD380LT3.7GB


Rated input → INPUT: 3PH AC380-480V 10.5A 50/60Hz

Rated output → OUTPUT: 3PH AC0-440V 9A 0-100Hz 3.7kW

S/N code → S/N: 

Manufacturer → Suzhou Inovance Technology Co.,Ltd.

1.2 Designation rule

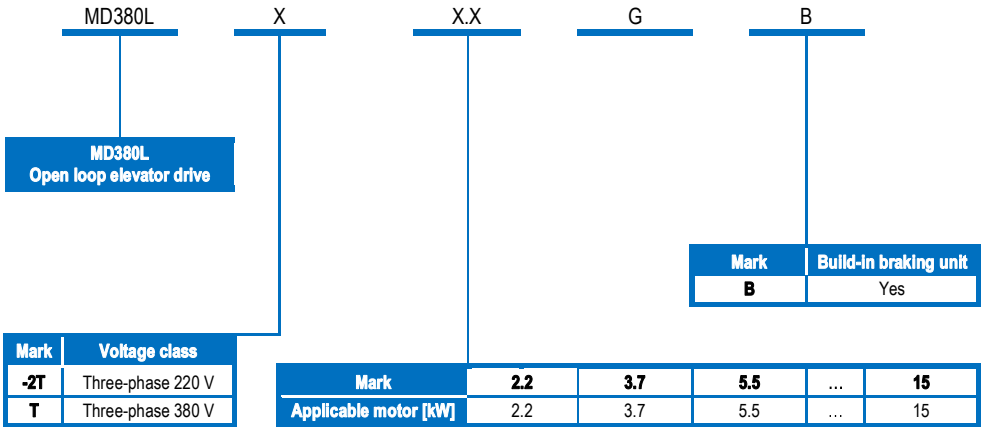

1.3 General specifications

Voltage class		220VAC				380/400/415VAC					
Drive Model		MD380L -T2.2GB	MD380L -T3.7GB	MD380L -T5.5GB	MD380L -T7.5GB	MD380L T3.7GB	MD380L T5.5GB	MD380L T7.5GB	MD380L T11GB	MD380L T15GB	
Dimension	Height	[H] : 248 mm		[H] : 322 mm		[H] : 248 mm		[H] : 322 mm			
	Width	[W] : 160 mm		[W] : 208 mm		[W] : 160 mm		[W] : 208 mm			
Mounting Hole	Depth	[D] : 183 mm		[D] : 192 mm		[D] : 183 mm		[D] : 192 mm			
	Mounting Hole	Ø5		Ø6		Ø5		Ø6			
Drive Input	Rated Input Voltage	Three-phase 200Vac to 240Vac, -15% to +10% (170Vac to 264Vac)				Three-phase 380 to 480V, -15% to +10% (323Vac to 528Vac)					
	Rated Input Current, [A]	10.5	14.6	26	35	10.5	14.6	20.5	26	35	
	Rated input frequency	50/60 Hz, ±5% (47.5 to 63Hz)									
Drive Output	Applicable Motor	[kW]	2.2	3.7	5.5	7.5	3.7	5.5	7.5	11	15
		[HP]	3	5	7.5	10	5	7.5	10.0	15	20
	Output Current, [A]*	9	13	25	32	9	13	17.0	25	32	
	Power Capacity, [kVA]	5.9	8.9	17	21	5.9	8.9	11	17	21	
	Overload Capacity	150% for 60 Sec & 180% for 3 Sec									
Max. output voltage	Three-phase 200Vac to 240Vac (Proportional to input voltage)					Three-phase 380Vac to 480Vac (Proportional to input voltage)					
Max. output frequency	100 Hz										
Braking Resistor	Recommended Power, [W]	500	750	1200	1500	750	1200	1500	2500	3000	
	Recommended Resistance, [Ω]	≥ 65	≥ 45	≥ 22	≥ 16	≥ 130	≥ 90	≥ 65	≥ 43	≥ 32	
Enclosure		IP 21									

☆: At 4 kHz carrier frequency without derating.

★: The mounting dimensions are shown below.

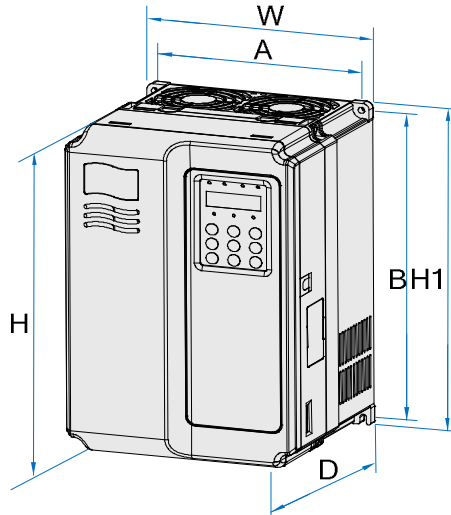


Fig 1. Physical appearance and dimensions


2 Wiring

2.1 Typical wiring 1 (use multi-reference input as frequency reference)

(Default: **F0-03=6**, use multi-reference)

Recommended Braking Resistor

Voltage class		220VAC				380/400/415VAC				
Drive Model		MD380L-2T2.2GB	MD380L-2T3.7GB	MD380L-2T5.5GB	MD380L-2T7.5GB	MD380L-T3.7GB	MD380L-T5.5GB	MD380L-T7.5GB	MD380L-T11GB	MD380L-T19GB
Braking Resistor	Recommended Power, [W]	500	750	1200	1500	750	1200	1500	2500	3000
	Recommended Resistance, [Ω]	≥65	≥45	≥22	≥16	≥130	≥90	≥65	≥43	≥32

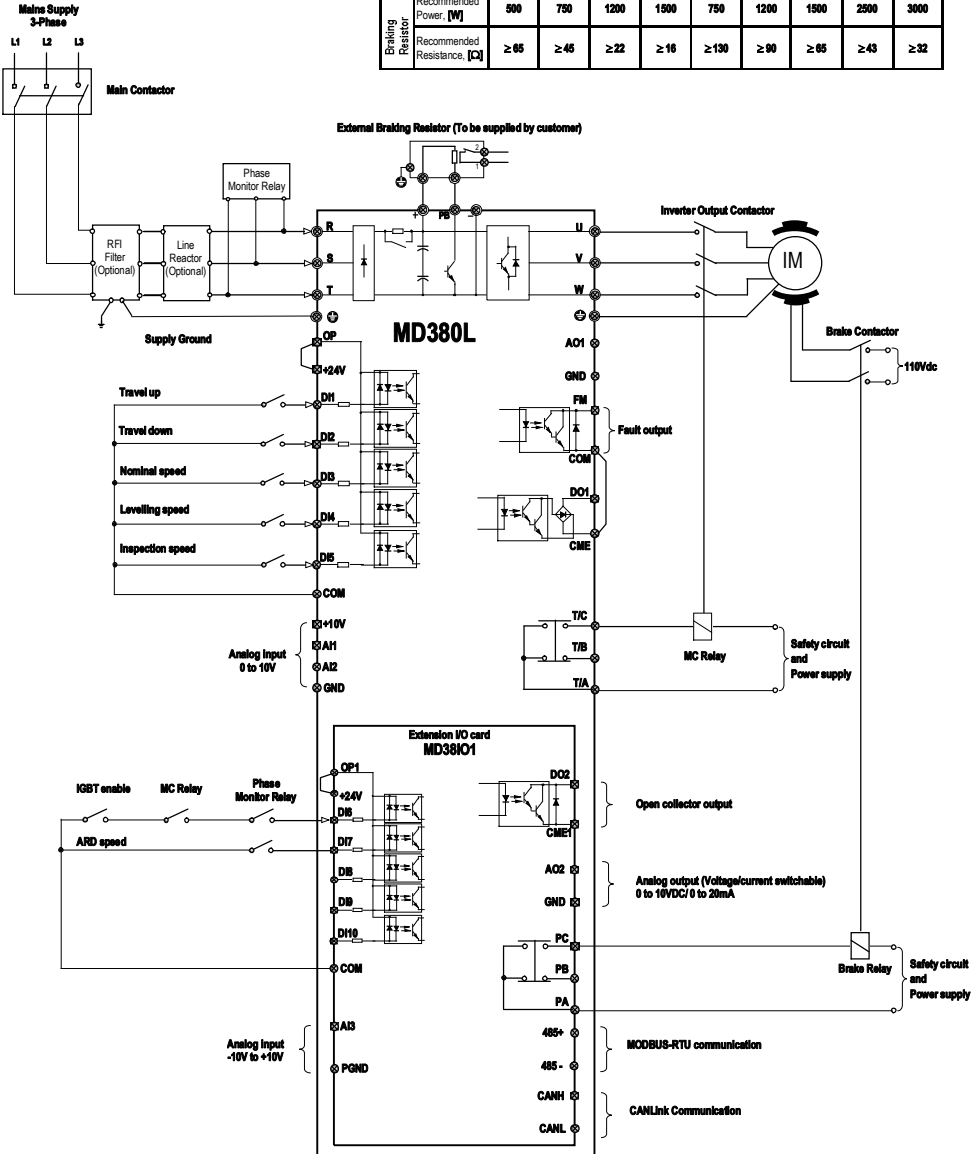


NOTE: Extension I/O card MD380I1 applies to the drive 3.7 kW and above only.

2.2 Typical wiring 2 (use analog input as frequency reference)

(Set **F0-03=2** to use AI1)

Recommended Braking Resistor

Voltage class		220VAC				380/400/415VAC				
Drive Model		MD380L-2T3.2GB	MD380L-2T3.7GB	MD380L-2T3.5GB	MD380L-2T7.5GB	MD380L-T3.7GB	MD380L-T3.5GB	MD380L-T7.5GB	MD380L-T11GB	MD380L-T19GB
Braking Resistor	Recommended Power, [W]	500	750	1200	1500	750	1200	1500	2500	3000
	Recommended Resistance, [Ω]	≥ 65	≥ 45	≥ 22	≥ 16	≥ 130	≥ 90	≥ 65	≥ 43	≥ 32

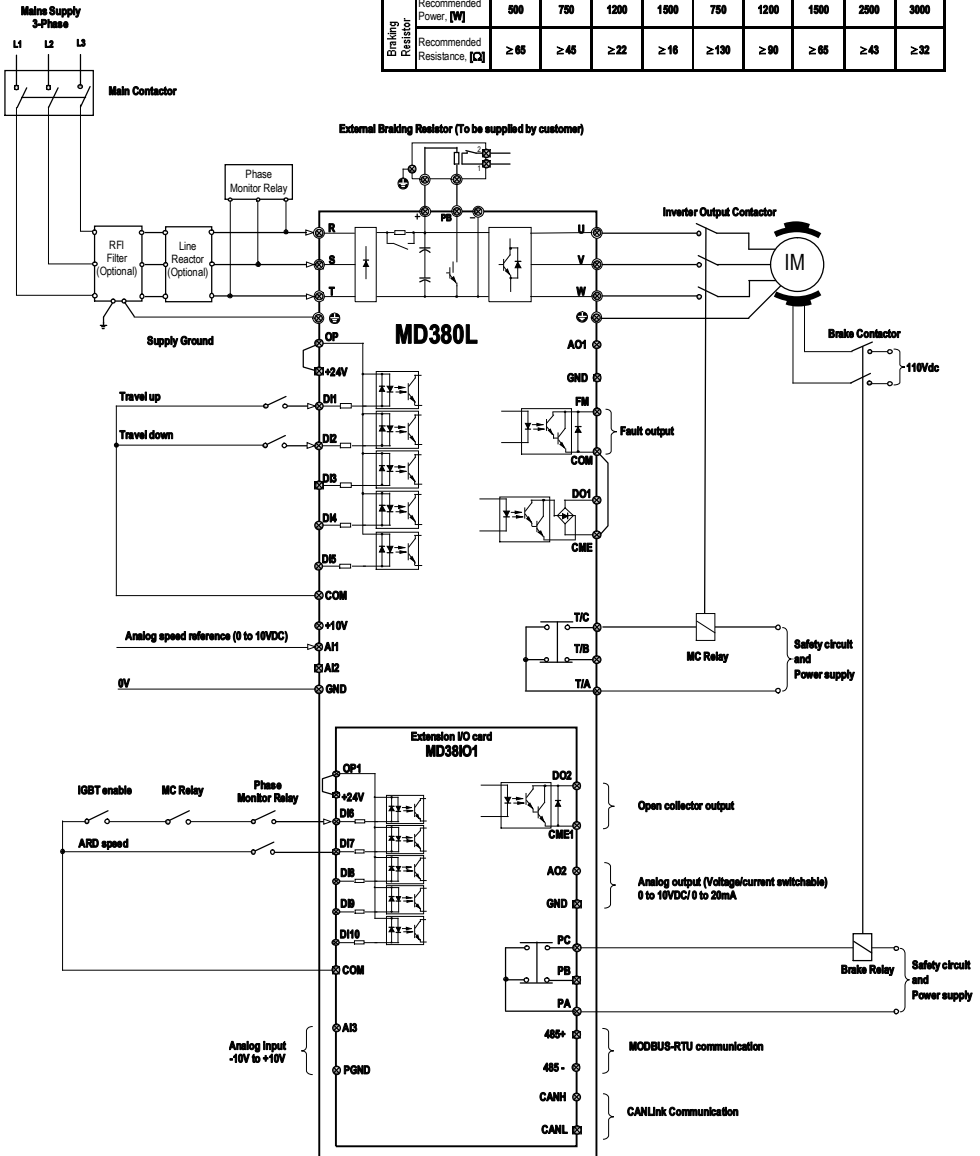


NOTE: Extension I/O card MD38IO1 applies to the drive 3.7 kW and above only.

2.3 Terminal description


✓ Terminals of main circuit

Warning: Do not use terminal (-) for braking resistor, otherwise inverter would be damaged!

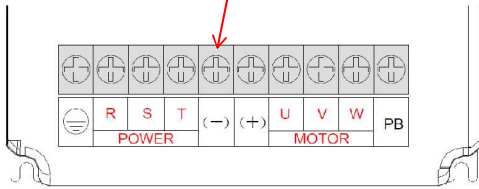

Terminal	Terminal Name	Description
R, S, T	Three-phase power supply input terminals	Connect to the three-phase AC power supply.
(-), (+)	Positive and negative terminals of DC bus	Common DC bus input point.
PB, (+)	Connecting terminals of braking resistor	Connect to a braking resistor.
U, V, W	Output terminals	Connect to a three-phase motor.
	Grounding terminal	Must be grounded.



✓ **Terminals of main control board**

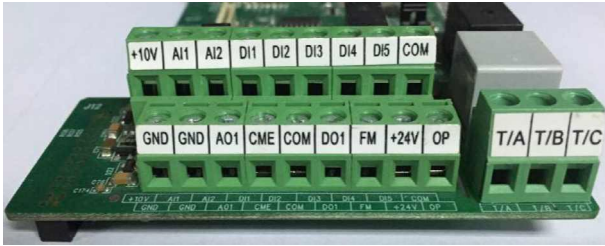

Terminal	Terminal Name	Description
+10V-GND	+10 VDC power supply	Provide +10 VDC power supply externally. Usually, it provides power supply to the external potentiometer with resistance range of 1 to 5 k Ω . Max. output current: 10 mA.
+24V-COM	+24 VDC power supply	Provide +24 VDC power supply externally. Usually, it provides power supply to DI/DO terminals and external sensors. Max. output current: 200 mA.
OP	Input terminal of external power supply	Connect to +24 VDC by default. Whether it connects to +24 V or COM is decided by jumper J7. When DI1 to DI5 need to be driven by the external signal, OP needs to be connected to the external power supply and be disconnected from +24 VDC.
AI1-GND	Analog input 1	AI1 input voltage range: 0 to 10 VDC. Impedance: 22 k Ω .
AI2-GND	Analog input 2	AI2 can be used as voltage input or current input, which is chosen by jumper J8 on main control card. Input range: 0 to 10 VDC or 4 to 20 mA. Impedance: 22 k Ω if voltage input, 500 Ω if current input.
DI1-COM	Digital input 1	
DI2-COM	Digital input 2	Optical coupling isolation, compatible with dual-polarity input. Impedance: 2.4 k Ω .
DI3-COM	Digital input 3	Input voltage range: 9 to 30 VDC.
DI4-COM	Digital input 4	
DI5-COM	High-speed pulse input	Besides features of DI1 to DI4, it can be used for high-speed pulse input. Max. input frequency: 100 kHz.
AO1-GND	Analog output 1	Voltage or current output, determined by jumper J5 on main control board. Output voltage range: 0 to 10 VDC. Output current range: 0 to 20 mA.
DO1-CME	Digital output 1	Open-collector, dual polarity output, optical coupling isolated. Voltage range: 0 to 24 VDC. Current range: 0 to 50 mA.
FM-COM	High-speed pulse output	It is restricted by F5-00 (FM terminal output mode selection). As a high-speed pulse output, the maximum frequency is 100 kHz. As an open-collector output, its specification is the same as that of DO1: Voltage range: 0 to 24 VDC. Current range: 0 to 50 mA.
T/A-T/B	Normally closed terminal	Contact driving capacity: 250 VAC, 3 A; 30 VDC, 1 A.
T/A-T/C	Normally open terminal	

2.4 Extension I/O card MD38101

NOTE: MD38101 applies to the drive 3.7 kW and above only.

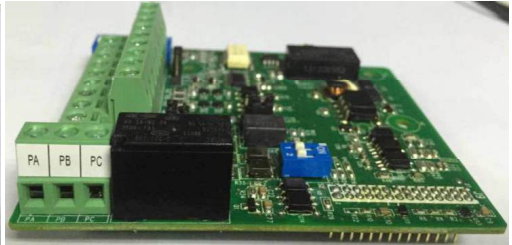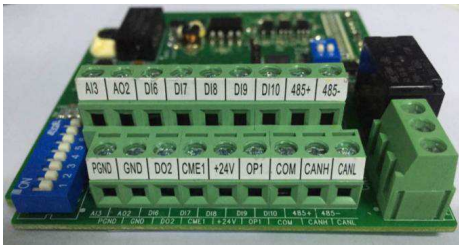

✓ Control configuration

Item	Listing	Description
Inputs	5 digital inputs; 1 analog input	AI range: -10 to 10 VDC, it can be used as AI, PT100 and PT1000 input (thermal sensor, 0 to 200°C).
Outputs	1 relay; 1 digital output; 1 analog output	
Communication	RS485 interface; CAN interface	RS485 supports MODBUS-RTU protocol; CAN supports CANlink protocol

✓ Terminals




Terminal	Terminal Name	Description
+24V-COM	+24 VDC power supply	Provide +24 VDC power supply externally. Usually, it provides power supply to DI/DO terminals and external sensors. Max. output current: 200 mA.
OP1	Input terminal of external power supply	Connect to +24 VDC by default. Whether it connects to +24 V or COM is decided by jumper J8. When DI6 to DI10 need to be driven by the external signal, OP1 needs to be connected to the external power supply and be disconnected from +24 VDC.
AI3-PGND	Analog input 3	Optical coupling isolation, compatible with differential signal and PT100/PT1000 temperature sensor input (0 to 200°C). Input voltage range: -10 to 10 VDC. Use dial switch S1 to select different input mode: Analog, or PT1000 or PT100, must not select more than one mode at one time.
DI6-COM	Digital input 6	
DI7-COM	Digital input 7	Optical coupling isolation, compatible with dual-polarity input. Impedance: 2.4 kΩ.
DI8-COM	Digital input 8	Input voltage range: 9 to 30 VDC.
DI9-COM	Digital input 9	
DI10-COM	Digital input 10	
AO2-GND	Analog output 2	Voltage or current output, determined by jumper J3 on extension I/O card. Output voltage range: 0 to 10 VDC. Output current range: 0 to 20 mA. Impedance range: for current output, 0 to 500 Ω
DO2-CME1	Digital output 2	Multi-function and dual-polarity and open-collector output. Voltage range: 0 to 24 VDC. Current range: 0 to 50 mA.

Terminal	Terminal Name	Description
485+ -485-	MODBUS communication terminal	MODBUS protocol. Baud rate: 300 to 115200 bps. Max. nodes: 32. Terminal resistance dial switch: S2.
PA-PB	Normally closed terminal	Contact driving capacity: 250 VAC, 3 A;
PA-PC	Normally open terminal	30 VDC, 1 A.
CANH-CANL	CANlink communication terminal	CANlink communication.

NOTE: see below configuration of jumpers

Jumper	Description
J3	AO2 output mode selection: voltage or current.
J4	CAN terminal resistance selection
J7	CME1 connection mode selection: connected to COM or not.
J8	OP1 connection mode selection: connected to internal +24V or not.
S1	AI input mode selection: analog input (voltage) or PT100 or PT1000 input (both 0 to 200°C).
S2	RS485 terminal resistance selection (RTU).

NOTE: see below configuration methods for dial switch S1:

S1 configuration	AI input mode
	Analog input (voltage).
	PT1000 thermal sensor (0 to 200°C).
	PT100 thermal sensor (0 to 200°C).

3 Operation panel

3.1 Get familiar with operation panel

✓ **Overview**



✓ **Parameter unit indicator**

Indicator appearance	Meaning
	Hz for frequency
	A for current
	V for voltage
	% for anything relevant


✓ **Keys on operation panel**

Key	Key Name	Function
	Programming	Enter or exit Level I menu.
	Confirm	Enter the menu interfaces level by level, and confirm the parameter setting.
	Increment	Increase data or function code.
	Decrement	Decrease data or function code.
	Shift	Select the displayed parameters in turn in the stop or running state, and select the digit to be modified when modifying parameters.
	RUN	Start the AC drive in the keypad operation mode.
	Stop/Reset	Stop the AC drive when it is in the running state and perform the reset operation when it is in the faulty state. The functions of this key are restricted by F7-02 .
	Multifunction	Perform function switchover (such as quick switchover of command source or direction) according to the setting of F7-01 .
	Menu mode selection	Perform switchover between menu modes according to the setting of FP-03 .

✓ **Relevant parameters for operation panel setting**

Function code	Parameter Name	Setting Range	Unit	Default	Commission
F7-01	MF.K key function selection	0: MF.K key disabled 1: Switchover from remote control (terminal or communication) to keypad control 2: Switchover between forward rotation and reverse rotation 3: Forward jog 4: Reverse jog 5: Individualized parameter display	N.A.	0	0
F7-02	STOP/RESET key function	0: STOP/RESET key enabled only in keypad control 1: STOP/RESET key enabled in any operation mode	N.A.	1	1
FP-03	Parameter display property	For user defined and user modified parameters 00: non of them will display 01: user defined parameters will display 10: user modified parameters will display 11: both of them will display	N.A.	00	

✓ **Operations of parameters**

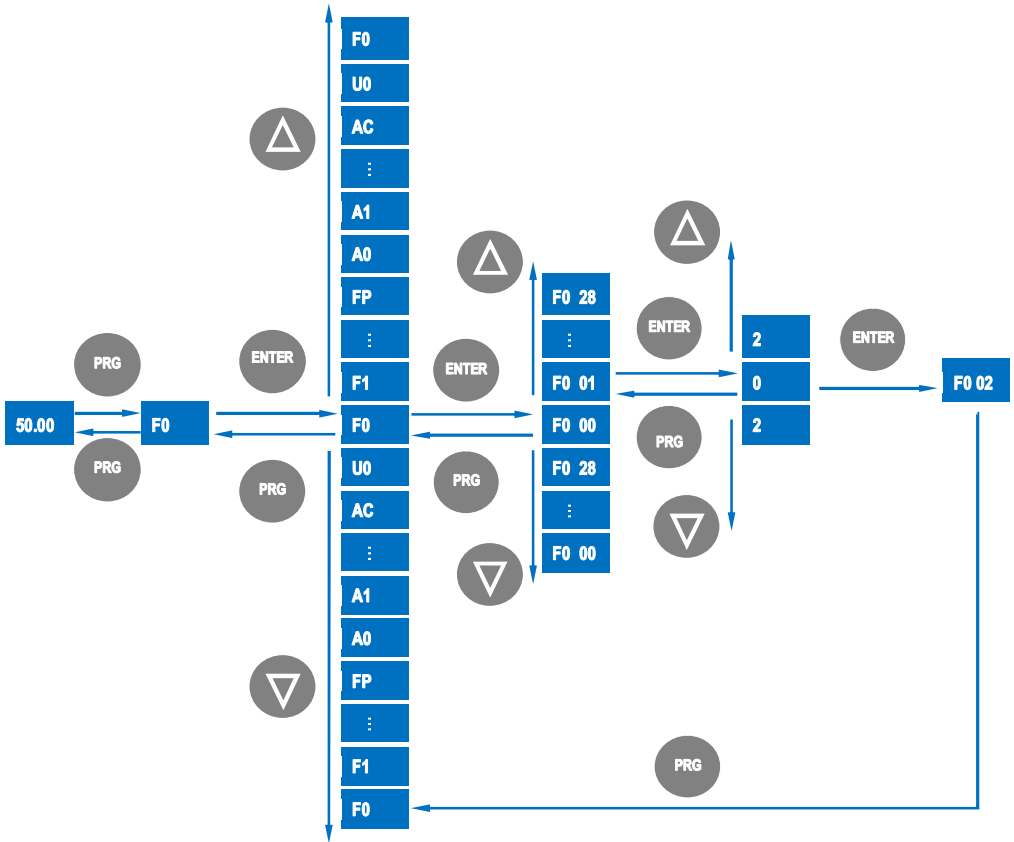


✓ **Parameter arrangement**

Function code Group	Description	Remark
F0 to FF	Standard function code group	Standard function parameters
A0 to AC	Advanced function code group	AI/AO correction
U0	Running state function code group	Display of state-monitoring parameters

4 Quick setup

4.1 Complete timing diagram for normal travel (use multi-reference as frequency reference)

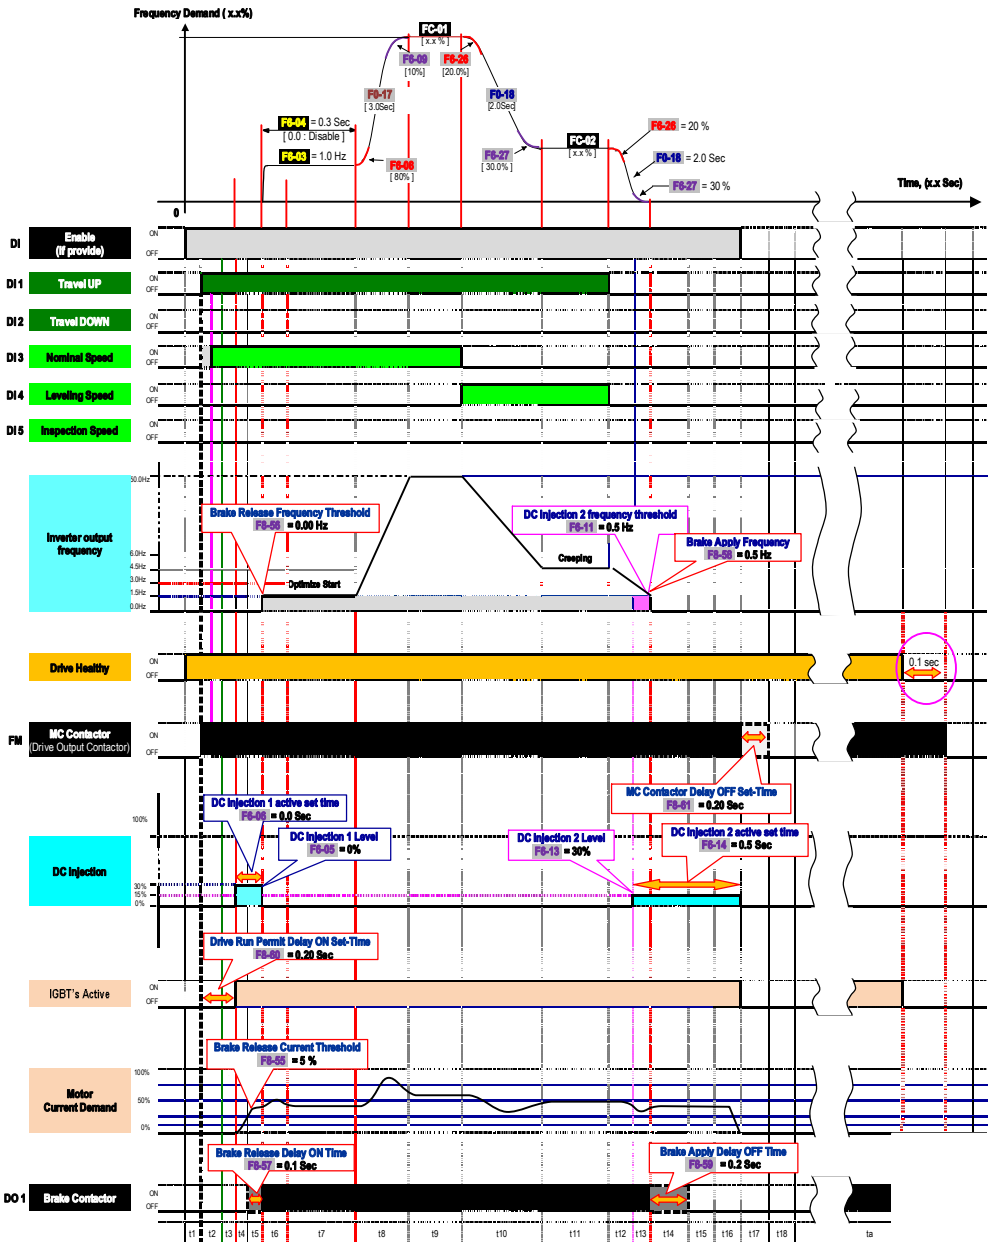


✓ **Timing diagram description**

Event	Descriptions	Function	Drive Status
ta	- Drive healthy - MC and brake Contactor are energised	---	RUN
tb	- Drive Trip - IGBTs disable - Brake contactor de-energised	---	Trip
tc	- MC contactor got de-energised provided drive IGBTs are disabled after 0.1sec	---	Trip
t1	- Drive waits to enable by lift controller	----	Inhibit
t2	- Drive MC contactor output energized when direction demand command enable by the lift controller. - Desired preset speed reference command enable by lift controller	F8-80	Ready
t3	- Drive IGBTs immediately go into active mode after the desire drive run permit delay ON set time has elapse.	F8-60	STOP
t4	- DC injection active - Motor brake contactor energized when motor current demand excess the brake release current level and brake release frequency	F6-05 F6-06 F8-55 F8-56	RUN
t5	- Motor brake contactor is energized - Optimize profile generator active - Motor start to run	F8-57 F6-03 F6-04	RUN
t6	- DC injection 1 disable after the desired set time has elapsed	F6-06	RUN
t7	- Start optimizer profile generator disable after the desired set time has elapse.	F6-04	RUN
t8	- Motor ramp up to the desire preset speed reference.	F6-08 F6-09 F0-17 FC-0x	RUN
t9	- Drive output at speed status	FC-0x	RUN
t10	- Change of preset speed reference demand - Motor ramp down to the desire preset speed reference	F6-08 F6-09 F0-17 FC-0x	RUN
t11	- Drive output at speed status	FC-0x	RUN
t12	- Direction demand command disabled - Motor ramp down to zero speed	F6-08 F6-09 F0-18	RUN
t13	- DC injection active when drive output falls below the DC injection 2 frequency threshold	F6-11 F6-13	RUN
t14	- Brake contactor got de-energise when the drive output frequency fall below the brake apply frequency	F8-56 F8-59	RUN
t15	- DC injection still active when brake contactor got de-energise.	F6-13	RUN
t16	- DC injection disable after the desire set time has elapse	F6-14	STOP
t17	- Drive IGBTs got disable - MC contactor delay OFF time active	---	Ready
t18	- MC contactor de-energise after the desire set time has elapse	F8-81	Inh


4.2 Elevator performance fine tuning

Frequency Demand

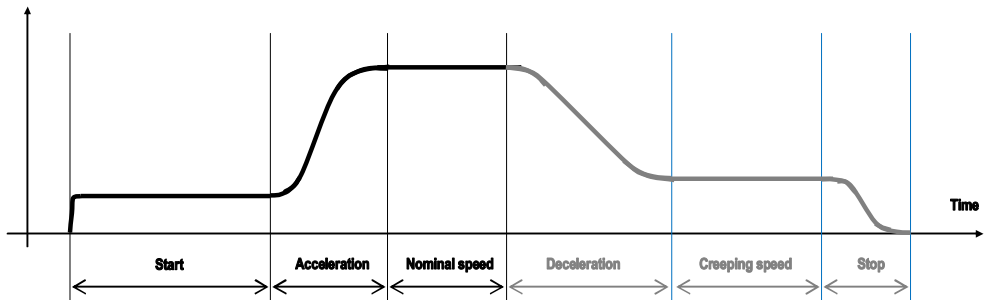

Stage	Symptom	Diagnostics	Remedies
Start	Rollback	Brake device releases too early	Increase F8-57 , ranging 0 to 0.5s
		Start frequency is too low	Increase F6-03 , ranging 0 to 1.5Hz
		Torque output is insufficient	Make sure F3-00=0 , F3-01=0
	Starting jerk	Brake device releases too late	Decrease F8-57 , ranging 0 to 0.5s
Start frequency is too high		Decrease F6-03 , ranging 0 to 1.5Hz	
Acceleration	Jerk when acceleration starts	Too fast acceleration at this section	Increase F6-08 , ranging 0 to 80% ; Or increase F0-17 , ranging 0 to 20s
	Jerk when acceleration end	Too fast acceleration at this section	Increase F6-09 , ranging 0 to $(95 - (F6-08))\%$ Or increase F0-17 , ranging 0 to 20s
	Overshoot when acceleration ends	Too big speed loop PI gains	Decrease F2-03 , ranging 0 to 100 Or increase F2-04 , ranging 0 to 10
	Vibration	Too small margin between F2-02 and F2-05	Make sure F2-05 - F2-02 > 3Hz , usually increase F2-05 , ranging from F2-02 to 7Hz
		Overcurrent stall prevention occurs	Make sure F3-18=170%
Nominal speed	Vibration	Too big speed loop PI gains	Decrease F2-00 or F2-03 , ranging 0 to 100 ; Or increase F2-01 or F2-04 , ranging 0.01 to 10.00
		Too big current loop PI gains	Double check the motor parameters and then perform motor auto-tuning once more

Frequency Demand

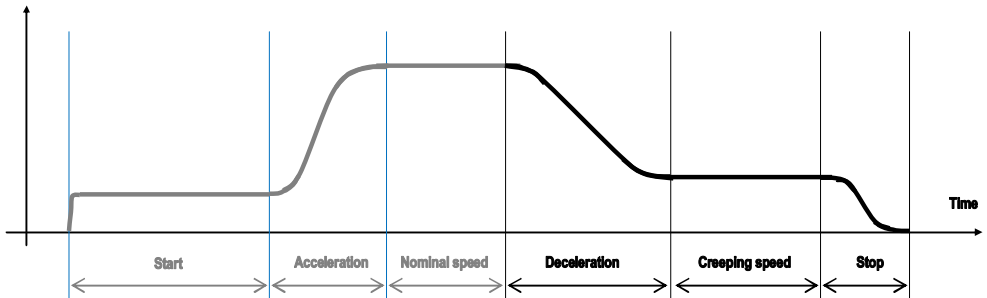

Stage	Symptom	Diagnostics	Remedies
Deceleration	Jerk when deceleration starts	Too fast deceleration at this section	Increase F6-26 , ranging 0 to 80% ; Or increase F0-18 , ranging 0 to 20s
	Vibration	Overcurrent stall prevention occurs	Make sure F3-18=170%
	Jerk when deceleration ends	Too fast deceleration at this section	Increase F6-27 , ranging 0 to 80% ; Or increase F0-18 , ranging 0 to 20s
Creeping speed	Vibration	Torque output is insufficient	Make sure F3-00=0 , F3-01=0
	Elevator gets stuck	Torque output is insufficient	Make sure F3-00=0 , F3-01=0
	Move much slower than expected	Torque output is insufficient Too small creeping speed setting	Make sure F3-00=0 , F3-01=0 Increase F4-16 , ranging 0 to 100% ; Or decrease relevant multi-reference
Stop	Jerk	Too fast deceleration at this section	1. Increase F6-27 , ranging 0 to 80% ; Or increase F0-18 , ranging 0 to 20s ; 2. Use second deceleration time F8-04 : First, set F8-04 bigger than F0-18 , ranging F0-18 to 20s ; then set F8-26 = creeping speed
		Braking device applies too early	Make sure F8-58=0.5Hz , then increase F8-59 , ranging 0 to 0.5s
		Too strong DC injection at stop	Decrease F6-13 , ranging 0 to 100%
	Slip	Too short DC injection active time at stop	Increase F6-14 , ranging 0 to 1s
		Too weak DC injection at stop	Increase F6-13 , ranging 0 to 100%
		Braking device applies too late	Make sure F8-58=0.5Hz , then decrease F8-59 , ranging 0 to 0.5s
	Inaccurate levelling position	Too slow deceleration	1. If F8-04 is not applied, then decrease F0-18 , ranging 0 to 20s ; 2. If F8-04 is applied, then firstly decrease F8-04 , ranging F0-18 to 20s ; secondly set F8-26 = creeping speed
		Slip occurs	Refer to problem 'Slip'
	Levelling varies with different loads	Too weak slip compensation	For SVC, increase F2-06 or F 2-00; For VF, increase F3-09

4.3 Setup flowchart

START	Para	Parameter name	Default	Commissioning
Ahead of setup		Default values are elicited from enormous real elevator applications, so users can rely on them usually, only some adjustments are necessary. If parameter restoration is prohibited due to some reasons, then the following steps have to be followed one by one.		
Remove DI wirings		usually if any DI is set as Forward or Reverse run and if signal is active, then some operations cannot succeed, such as restoring parameters, changing command source, which are necessary steps for quick setup. So it's seriously recommended to remove DI wirings at the beginning of commissioning.		
Restore parameters	FP-01	Parameter operation	0	1
		0: No operation 1: Restore default settings except motor parameters 2: Clear records including errors 4: Restore user's backup parameters 501: Backup parameters NOTE usually people have no idea what parameters have been changed, so it's seriously recommended to restore parameters to default at the beginning of commissioning.		
Set motor parameters		Motor Nameplate		
	F1-01	Rated motor power	model dependent	
		Unit: kW		
	F1-02	Rated motor voltage	400	
		Unit: V		
	F1-03	Rated motor current	model dependent	
		Unit: A		
	F1-04	Rated motor frequency	50.00	
		Unit: Hz		
	F1-05	Rated motor speed	1440	
		Unit: rpm.		
CONTINUE	Para.	Parameter name	Default	Com

CONTINUE	Para.	Parameter name	Default	Commissioning
<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;">Select command source</div> <div style="text-align: center;">↓</div> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;">Perform motor auto tuning</div> <div style="text-align: center;">↓</div> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;">Select Control mode</div> <div style="text-align: center;">↓</div> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;">Select frequency reference source</div> <div style="text-align: center;">↓</div> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;">Set AI if AI is frequency reference</div> <div style="text-align: center;">↓</div> <div style="background-color: #0056b3; color: white; padding: 5px;">CONTINUE</div>	F0-02	Command source selection 0: Operation panel control (indicator 'LOCAL/REMOT' OFF) 1: Terminal control (indicator 'LOCAL/REMOT' ON) 2: Communication control (indicator 'LOCAL/REMOT' blinking)	1	0
	F1-37	Auto-tuning selection 0: No auto-tuning 2: Asynchronous motor dynamic auto-tuning 3: Asynchronous motor static auto-tuning(NEW) NOTE Motor won't rotate at this stage. Steps of auto-tuning: 1. Make sure the UVW connection between inverter and motor is not cut off by output contactor; if it is cut off, then manually handle with the output contactor; 3. Set F1-37=3, press , then LED on panel will display letters 'TUNE'; 4. Press the key on panel, then motor starts auto-tuning, it usually takes about 30 seconds to finish this auto-tuning, wait until LED stops displaying 'TUNE'; 5. Restore F0-02 to the default value 1.	0	3
	F0-01	Control mode selection 0: SVC control 2: VF control	2	0 or 2
	F0-03	Main frequency source X selection 0: Digital setting F0-08 (pressing or can change F0-08 easily, and the changed value won't be cleared even after power off) 1: Digital setting F0-08 (pressing or can change F0-08 easily, but changed value would be cleared after power off) 2: AI1 3: AI2 4: AI3 5: Pulse setting (DI5) 6: Multi-reference setting 7: Simple PLC 8: PID 9: Communication setting	6	2 or 6
	F4-13	AI curve 1 minimum input 0 V to F4-15;	0.00	0.00
	F4-14	Corresponding setting of AI1 minimum input -100.0% to 100.0%	0.0	0.0
	F4-15	AI1 maximum input F4-13 to 10.00 V	5.00	
	F4-16	Corresponding setting of AI1 maximum input -100.0% to 100.0%	100.0	
CONTINUE	Para.	Parameter name	Default	Com

CONTINUE

Set multi-reference values

if multi-reference is frequency reference

Set DI function

CONTINUE

Para.	Parameter name	Default	Commissioning
FC-01	Reference 1	100.0	100.00
	0.0 to 100.0%. NOTE: FC-01 is set as nominal speed of elevator.		
FC-02	Reference 1	11.0	11.0
	0.0 to 100.0%. NOTE: FC-02 is set as creep speed of elevator.		
FC-04	Reference 4	40.0	40.00
	0.0 to 100.0%. NOTE: FC-04 is set as inspection speed of elevator.		
FC-08	Reference 8	20.0	20.0
	0.0 to 100.0%. NOTE: FC-08 is set as ARD speed of elevator.		
F4-00	DI1 function selection	1	1 (Forward run)
	0: No function 1: Forward RUN (FWD) 2: Reverse RUN (REV) 8: IGBT Enable 9: Fault reset (RESET) 12: Multi-reference terminal 1 13: Multi-reference terminal 2 14: Multi-reference terminal 3 Setting range:0 to 59; NOTE: this signal comes from elevator controller.		
F4-01	DI2 function selection	2	2 (Reverse run)
	Setting range same as DI1; NOTE: this signal comes from elevator controller.		
F4-02	DI3 function selection	12	12
	Setting range same as DI1 NOTE: if analog input is used as frequency reference, then DI3 is useless, just leave it alone. If multi-reference is used as frequency reference, then signal 'nominal speed' comes from elevator controller.		
F4-03	DI4 function selection	13	13
	Setting range same as DI1. NOTE: if analog input is used as frequency reference, then DI4 is useless, just leave it alone. If multi-reference is used as frequency reference, then signal 'creep speed' comes from elevator controller.		
F4-04	DI5 function selection	14	14
	setting range same as DI1; NOTE: if analog input is used as frequency reference, then DI5 is useless, just leave it alone. If multi-reference is used as frequency reference, then signal 'inspection speed' comes from elevator controller.		
F4-05	DI6 function selection	0	
	setting range same as DI1;		

Para.	Parameter name	Default	Com
-------	----------------	---------	-----


CONTINUE	Para.	Parameter name	Default	Commissioning
<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;">Set DO function</div> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;">Set magnetic contactor</div> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;">Set brake contactor</div> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;">Set acceleration and deceleration</div> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;">Set startup frequency</div>	F5-01	FM function selection 0 : No output 1 : AC Drive running 2 : Fault output 36: Software current exceeding limit 42 : Brake output 43 : MC (Magnetic contactor) output Setting range:0 to 59; NOTE: this signal goes to magnetic contactor.	2	2(Fault output)
	F5-02	Relay function selection(TA/TB/TC) Setting range same as FM; NOTE: this signal goes to magnetic controller.	43	43 (MC)
	F5-03	Relay function selection(PA/PB/PC) Setting range same as FM; NOTE: this signal goes to brake contactor.	42	42(Brake)
	F8-60	Drive run delay ON set time 0.00 to 10.00 Sec; NOTE: if MC is controlled by elevator controller, then F8-60 is useless.	0.20	0.20
	F8-61	MC contactor delay OFF set time 0.00 to 10.00 Sec; NOTE: if MC is controlled by elevator controller, then F8-61 is useless.	0.20	0.20
	F8-55	Brake release current threshold 0 to 200%;	5	5
	F8-56	Brake release frequency threshold 0.00 to 25.00 Hz;	0.00	0.0
	F8-57	Brake release delay ON set time 0.0 to 5.0 Sec;	0.0	0.0
	F8-58	Brake apply frequency threshold 0.00 to 25.00 Hz;	0.5	0.5
	F8-59	Brake apply delay OFF set time 0.0 to 5.0 Sec;	0.2	0.2
F0-17	Acceleration time 1 0.0 to 6500.0 sec.	3.0	3.0	
F0-18	Deceleration time 1 0.0 to 6500.0 sec.	2.0	2.0	
F6-03	Startup frequency 0.0 to 10.0 Hz;	1.0	1.0	
F6-04	Startup frequency active set time 0.0 to 100.0 Sec	0.3	0.3	
CONTINUE	Para.	Parameter name	Default	Com

CONTINUE	Para.	Parameter name	Default	Commissioning
<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;">Set S-curve</div> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;">Set DC Injection for stopping</div> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;">Set VF parameters <small>if it is VF control</small></div> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;">Set SVC parameters</div> <div style="background-color: #0056b3; color: white; padding: 5px; text-align: center;">OVER</div>	F6-07	Acceleration/Deceleration mode 0 : Linear acceleration/ deceleration 3: S-curve acceleration/ deceleration C	3	3
	F6-08	Time proportion of S-curve at Accel start 0.0% to Min[(100.0% - F6-09), 80%]	80.0	80.0
	F6-09	Time proportion of S-curve at Accel end 0.0% to Min[(100.0% - F6-08), 80%]	10.0	10.0
	F6-26	Time proportion of S-curve at Decel start 0.0% to Min[(100.0% - F6-27), 80%]	20.0	20.0
	F6-27	Time proportion of S-curve at Decel end 0.0% to Min[(100.0% - F6-26), 80%]	30.0	30.0
	F6-11	DC injection 2 frequency threshold 0.00 Hz to maximum frequency	0.50	0.50
	F6-12	DC Injection 2 delay ON set time 0.0 to 36.0 Sec	0.0	0.0
	F6-13	DC injection 2 level 0 to 100 Hz	30	30
	F6-14	DC injection 2 active set time 0.0 to 36.0 Sec	0.5	0.5
	F3-00	V/F curve selection 0: Linear V/F 1: Multi-point V/F SETTING RANGE 0 to 11;	0	0
	F3-01	Torque boost 0.0 to 30.0 %; NOTE if it is 0, then auto torque boost is activated, and it is recommended to use auto torque boost.	0.0	0.0
	F2-00	Speed loop proportional gain 1 0 to 100.	10	10
	F2-01	Speed loop integral time 1 0.01 to 10.00 Sec.	0.5	0.5
	F2-02	Switchover frequency 1 0.00 to F2-05	3.00	3.00
	F2-03	Speed loop proportional gain 2 0 to 100.	30	30
F2-04	Speed loop integral time 2 0.01 to 10.00 Sec.	0.5	0.5	
F2-05	Switchover frequency 2 F2-02 to maximum output frequency	7.00	7.00	

4.4 IGBT Enable

In all elevator applications, an Output Contactor is installed between the inverter output U, V, W and the motor. In an emergency, the Safety Line is opened due to an unsafe condition and the Output Contactor disconnects the power from the inverter to the motor (the motor brake is also applied at the same time). When the Output Contactor opens with current flowing through to the motor (inverter IGBTs are active), there will be arcing in the Output Contactor depending on the motor inductive energy. Arcing of the Output Contactor can reduce the lifetime of the contactor and in some severe cases can damage the contacts poles. Therefore it is recommended to electronically switch off the inverter IGBT firing circuits before opening the Output Contactor (milliseconds later). The inverter IGBT firing can be electronically switched off with the "IGBT Enable" function as shown in the timing charts below.

CAUTION: An Output Contactor MUST always be installed as the final safety power cut off to the motor. The "IGBT Enable" function is NOT a substitute for an Output Contactor, it is designed to work together with the Output Contactor.

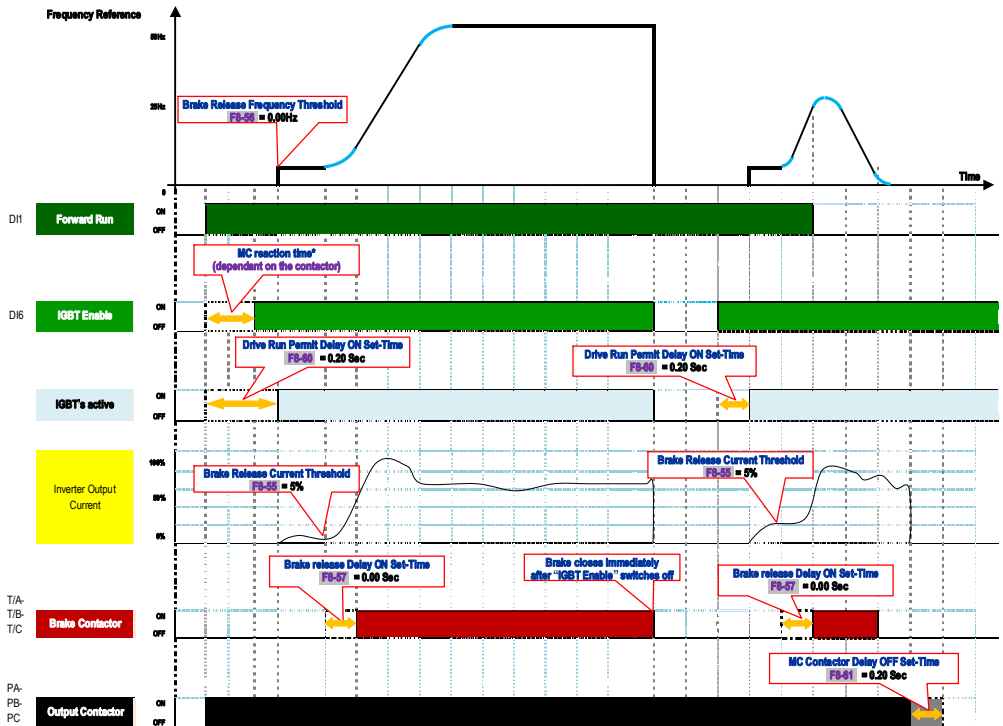

* **MC reaction time:** the reaction time of output relay of MC.

For some applications, the status of output contactor needs to be checked before inverter starts up, hence one relay output of MC will feedback to IGBT Enable (above in the diagram it is D16).

This function can work by assigning "IGBT Enable" function to a digital input, please refer to the table below to set.

Take DI6 for example: assign "IGBT Enable" to DI6, then set F4-05=8. If it's necessary to change active mode of IGBT Enable, then use F4-38 or F4-39 to set (low level or high level active).

Function Code	Parameter Name	Setting Range	Unit	Default	Commission
F4-00	DI 1 function selection	0 : No function	N.A	1	
F4-01	DI 2 function selection	1 : Forward RUN (FWD)	N.A	2	
F4-02	DI 3 function selection	2 : Reverse RUN (REV)	N.A	12	
F4-03	DI 4 function selection	N.A	13	
F4-04	DI 5 function selection	8 : IGBT Enable	N.A	14	
F4-05	DI 6 function selection	N.A	0	8
F4-06	DI 7 function selection	12: Multi-reference terminal 1	N.A	15	
F4-07	DI 8 function selection	13: Multi-reference terminal 2	N.A	0	
F4-08	DI 9 function selection	14: Multi-reference terminal 3	N.A	0	
F4-09	DI 10 function selection	15: Multi-reference terminal 4	N.A	0	
F4-38	DI active mode selection (Normal: low level active)	7-segment			
		<div style="display: flex; justify-content: space-around;"> 00000 </div>	N.A	00000	

DI5 active mode:

0: Normal

1: Opposite

DI4 active mode:

0: Normal

1: Opposite

DI3 active mode:

0: Normal

1: Opposite

DI 2 active mode:


0: Normal

1: Opposite

DI 1 active mode:

0: Normal

1: Opposite

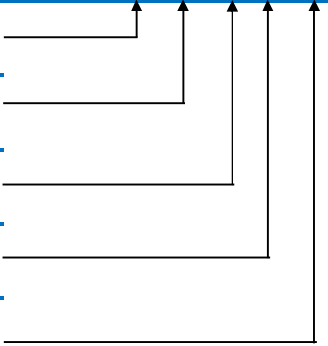

F4-39	DI active mode selection 2 (Normal: low level active)	7-segment			
		<div style="display: flex; justify-content: space-around;"> 00000 </div>	N.A	00000	

DI10 active mode:

0: Normal

1: Opposite

DI9 active mode:

0: Normal

1: Opposite

DI8 active mode:

0: Normal

1: Opposite

DI7 active mode:


0: Normal

1: Opposite

DI6 active mode:

0: Normal

1: Opposite

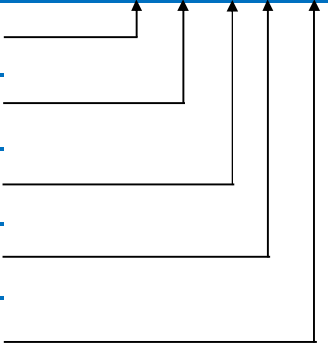

5 Function code table

NOTE not all parameters are listed, here below are relevant to open loop elevator applications.

5.1 Group F0: fundamental

Function Code	Parameter name	Setting Range	Unit	Default	Commission
F0-01	Motor 1 control mode	0 : Sensor-less flux vector control (SFVC) 2 : V/F control	N.A	2	
F0-02	Command source selection	0 : Operation panel control (LED off) 1 : Terminal control (LED on) 2 : Communication control (LED flashing)	N.A	1	
F0-03	Main frequency source X selection	2 : AI-1 3 : AI-2 4 : AI-3 6 : Multi-reference	N.A	6	
F0-07	Frequency source selection	0 : Main frequency source X	N.A	0	
F0-09	Rotation direction	0 : Same direction 1 : Reverse direction	N.A	0	
F0-10	Maximum frequency	50.00 to 100.00	Hz	50.00	
F0-15	Carrier frequency	0.5 to 11.0 (SVC mode: 0.5 to 9) (VF mode: 0.5 to 11)	kHz	Model dependant	
F0-17	Acceleration time 1	0.00 to 650.00 (F0-19 = 2) 0.0 to 6500.0 (F0-19 = 4) 0 to 65000 (F0-19 = 0)	Sec	3.0	
F0-18	Deceleration time 1	0.00 to 650.00 (F0-19 = 2) 0.0 to 6500.0 (F0-19 = 1) 0 to 65000 (F0-19 = 0)	Sec	2.0	
F0-19	Acceleration/Deceleration time unit	0 : 1 1 : 0.1 2 : 0.01	Sec	1	1

5.2 Group F1: motor 1 parameters

Function Code	Parameter name	Setting Range	Unit	Default	Commission
F1-00	Motor type selection	0 : Common asynchronous motor 1 : Variable frequency asynchronous motor	N.A	0	
F1-01	Motor rated power	0.1 to 1000.0	kW	Model dependent	
F1-02	Motor rated voltage	1 to 2000	V	400	
F1-03	Motor rated current	0.01 to 655.35 (For AC drive power ≤ 55 kW) 0.1 to 6553.5 (For AC drive power > 55 kW)	A	Model dependent	
F1-04	Motor rated frequency	0.01 Hz to maximum frequency	Hz	50	
F1-05	Motor rated rotational speed	1 to 65535	RPM	1440	
F1-06	Stator resistance (asynchronous motor)	0.001 to 65.535 (AC drive power ≤ 55 kW) 0.0001 to 6.5535 (AC drive power > 55 kW)	Ω	0	
F1-07	Rotor resistance (asynchronous motor)	0.001 to 65.535 (AC drive power ≤ 55 kW) 0.0001 to 6.5535 (AC drive power > 55kW)	Ω	0.000	
F1-08	Leakage inductive reactance (asynchronous motor)	0.01 to 655.35mH (AC drive power ≤ 55 kW) 0.001 to 65.535 (AC drive power > 55 kW)	mH	0.00	
F1-09	Mutual inductive reactance (asynchronous motor)	0.01 to 655.35 (AC drive power ≤ 55 kW) 0.001 to 65.535 (AC drive power > 55 kW)	mH	0.00	
F1-10	No-load current (asynchronous motor)	0.01 to F1-03 (AC drive power ≤ 55 kW) 0.1 to F1-03 (AC drive power > 55 kW)	A	0.00	
F1-37	Auto tuning selection	0 : No auto-tuning 2 : Asynchronous motor dynamic auto-tuning 3 : Asynchronous motor static auto-tuning(NEW)	N.A	0	

5.3 Group F2: vector control

Function Code	Parameter name	Setting Range	Unit	Default	Commission
F2-00	Speed loop proportional gain 1	0 to 100	N.A	10	
F2-01	Speed loop integral time 1	0.01 to 10.00	Sec	0.50	
F2-02	Switchover frequency 1	0.00 to F2-05	Hz	3.00	
F2-03	Speed loop proportional gain 2	0 to 100	N.A	30	
F2-04	Speed loop integral time 2	0.01 to 10.00	Sec	0.5	
F2-05	Switchover frequency 2	F2-02 to maximum output frequency	Hz	7.00	
F2-06	SVC slip gain	50 to 200	%	100	
F2-10	Torque upper limit (for SVC)	0.0 to 200.0 (% inverter rated current)	%	150.0	
F2-13	Excitation adjustment proportional gain	0 to 20000	N.A	2000	
F2-14	Excitation adjustment integral gain	0 to 20000	N.A	1300	
F2-15	Torque adjustment proportional gain	0 to 20000	N.A	2000	
F2-16	Torque adjustment integral gain	0 to 20000	N.A	1300	

5.4 Group F3: VF control

Function code	Parameter Name	Setting Range	Unit	Default	Commission
F3-00	V/F curve setting	0: Linear V/F 1: Multi-point V/F 2 to 11: not relevant settings	N.A.	0	
F3-01	Torque boost	0.0 to 30.0 (if it is 0, then auto torque boost is activated)	%	0	
F3-02	Cut-off frequency of torque boost	0.00 to max output frequency	Hz	50.00	
F3-03	Multi-point V/F frequency 1 (F1)	0.00 to F3-05	Hz	1.50	
F3-04	Multi-point V/F voltage 1 (V1)	0.0 to 100.0	%	6.0	
F3-05	Multi-point V/F frequency 2 (F2)	F3-03 to F3-07	Hz	3.00	
F3-06	Multi-point V/F voltage 2 (V2)	0.0 to 100.0	%	8.0	
F3-07	Multi-point V/F frequency 3 (F3)	F3-05 to rated motor frequency (F1-04)	Hz	8.00	
F3-08	Multi-point V/F voltage 3 (V3)	0.0 to 100.0	%	20.0	
F3-09	V/F slip compensation gain	0 to 200.0	%	0.0	
F3-10	V/F over-excitation gain	0 to 200	%	0	
F3-11	V/F oscillation suppression gain	0 to 100	%	30	
F3-13	Voltage source for V/F separation	0 to 8	N.A.	0	
F3-14	Voltage digital setting for V/F separation	0 to rated motor voltage	V	0	
F3-15	Voltage rise time of V/F separation	0.0 to 1000.0	s	0.0	
F3-18	Overcurrent stall prevention current limit (for VF mode)	100 to 200 (% inverter rated current)	%	170	
F3-19	Overcurrent stall prevention enable(for VF mode)	0: Disable; 1: Enable	N.A.	1	
F3-20	Overcurrent stall prevention gain(for VF mode)	0 to 100	N.A.	20	
F3-22	Overvoltage stall prevention voltage limit(for VF/SVC)	650 to 800	V	770	
F3-23	Overvoltage stall prevention enable(for VF/SVC)	0: Disable ; 1: Enable	N.A.	0	
F3-24	Overvoltage stall prevention frequency gain(for VF/SVC)	0 to 100	N.A.	30	
F3-25	Overvoltage stall prevention voltage gain(for VF/SVC)	0 to 100	N.A.	30	

5.5 Group F4: input terminals

Function Code	Parameter name	Setting Range	Unit	Default	Commission
F4-00	DI 1 function selection (Standard on-board)	0: No function 1: Forward RUN (FWD) 2: Reverse RUN (REV) 3: Three-line Control	N.A	1	
F4-01	DI 2 function selection (Standard on-board)	4: Jog Forward (FJOG) 5: Jog Reverse (RJOG) 6: Terminal UP 7: Terminal DOWN	N.A	2	
F4-02	DI 3 function selection (Standard on-board)	8: IGBT Enable 9: Fault reset (RESET) 10: RUN Pause 11: Normally open (NO) input of external fault	N.A	12	
F4-03	DI 4 function selection (Standard on-board)	12: Multi-reference terminal 1 13: Multi-reference terminal 2 14: Multi-reference terminal 3 15: Multi-reference terminal 4	N.A	13	
F4-04	DI 5 function selection (Standard on-board)	16: Terminal 1 for acceleration/deceleration time selection 17: Terminal 2 for acceleration/deceleration time selection	N.A	14	
F4-05	DI 6 function selection (On-board expansion card)	18: Frequency source switchover 19: UP and DOWN setting clear (terminal, operation panel) 20: Command source switchover terminal 1 21: Acceleration/Deceleration prohibited	N.A	0	8
F4-06	DI 7 function selection (On-board expansion card)	22: PID pause 23: PLC status reset 24: Swing pause 25: Counter input	N.A	0	15
F4-07	DI 8 function selection (On-board expansion card)	26: Counter reset 27: Length count input 28: Length reset 29: Torque control prohibited	N.A	0	
F4-08	DI 9 function selection (On-board expansion card)	30: Pulse input (enabled only for DI5) 31: Reserved 32: Immediate DC braking 33: Normally closed (NC) input of external fault	N.A	0	
F4-09	DI 10 function selection (On-board expansion card)	34: Frequency modification forbidden 35: Reverse PID action direction 36: External STOP terminal 1 37: Command source switchover terminal 2 38: PID integral pause 39: Switchover between main frequency source X and preset frequency 40: Switchover between auxiliary frequency source Y and preset frequency 41: Motor selection terminal 1 42: Motor selection terminal 2	N.A	0	

Function Code	Parameter name	Setting Range	Unit	Default	Commission
		43: PID parameter switchover			
		44: User defined fault 1			
		45: User defined fault 2			
		46: Speed control/Torque control switchover			
		47: Emergency stop			
		48: External STOP terminal 2			
		49: Deceleration DC braking			
		50: Clear the current running time			
		51: Switchover between two-line mode and three line mode			
		52 to 59 : Reserved			
F4-10	DI filter time	0.000 to 1.000	Sec	0.010	
F4-11	Terminal command mode	0 : Two-line mode 1 1 : Two-line mode 2 2 : Three-line mode 1 3 : Three-line mode 2	N.A	0	
F4-12	Terminal UP/DOWN rate	0.01 to 65.535	Hz/s	1.00	
F4-13	AI curve 1 minimum input	0.00 to F4-15	V	0.00	
F4-14	Corresponding setting of AI curve 1 minimum input	-100.00 to 100.00	%	0.0	
F4-15	AI curve 1 maximum input	F4-13 to 10.00V	Volt	5.00	
F4-16	Corresponding setting of AI curve 1 maximum input	-100.00 to 100.00	%	100.0	
F4-17	AI 1 filter time	0.00 to 10.00	Sec	0.10	
F4-38	DI valid mode selection (for DI1 to DI5)	00000 to 11111 (binary)	N.A	00000	
F4-39	DI valid mode selection 2 (for DI6 to DI10)	00000 to 11111 (binary)	N.A	00000	

5.6 Group F5: output terminals

Function Code	Parameter name	Setting Range	Unit	Default	Commission
F5-00	FM terminal output mode	0 : High-speed pulse output (FMP) 1 : ON/OFF output (FMR)	N.A	1	
F5-01	FMR function (open-collector output terminal) Attention! Set F5-00 = 1 when FM is used as MC or Brake output .	0 : No output 1 : AC Drive running 2 : Fault output (stop) 3 : Frequency-level detection FDT1 output 4 : Frequency reached 5 : Zero-speed running (no output at stop) 6 : Motor overload pre-warning 7 : AC Drive overload pre-warning 8 : Set count value reached 9 : Designated count value reached 10 : Length reached 11 : PLC cycle complete 12 : Accumulated running time reached 13 : Frequency limited 14 : Torque limited 15 : Ready for RUN 16 : AI-1 larger than AI-2 17 : Frequency upper limit reached 18 : Frequency lower limit reached (no output at stop) 19 : Under-voltage state output 20 : Communication setting 21-22 : Reserved 23 : Zero-speed running 2 (having output at stop) 24 : Cumulative power-on time reached 25 : Frequency-level detection FDT2 output 26 : Frequency 1 reached 27 : Frequency 2 reached 28 : Current 1 reached 29 : Current 2 reached 30 : Timing reached	N.A	2	
F5-02	Relay function (T/A-T/BT/C)	10 : Length reached 11 : PLC cycle complete 12 : Accumulated running time reached 13 : Frequency limited 14 : Torque limited 15 : Ready for RUN	N.A	43	
F5-03	Extension card relay function (P/A-P/B-P/C)	16 : AI-1 larger than AI-2 17 : Frequency upper limit reached 18 : Frequency lower limit reached (no output at stop) 19 : Under-voltage state output 20 : Communication setting 21-22 : Reserved 23 : Zero-speed running 2 (having output at stop)	N.A	42	
F5-04	DO-1 function selection (open-collector output terminal)	24 : Cumulative power-on time reached 25 : Frequency-level detection FDT2 output 26 : Frequency 1 reached 27 : Frequency 2 reached 28 : Current 1 reached 29 : Current 2 reached 30 : Timing reached	N.A	0	
F5-05	Extension card DO-2 function	31 : AI-1 input limit exceeded 32 : Load becoming 0 33 : Reverse running 34 : Zero current state 35 : Module temperature reached 36 : Software current limit exceeded 37 : Frequency lower limit reached (having output at stop) 38 : Alarm output 39 : Motor overheat warning 40 : Current running time reached 41 : Fault output (There is no output if it is the coast-to-stop fault and under-voltage occurs) 42 : Brake output 43 : MC (Magnetic contactor) output	N.A	0	
F5-07	AO1 function selection	0 : Running frequency 1 : Set frequency 2 : Output current 3 : Output torque (absolute value)	N.A	3	

5.7 Group F6: start and stop control

Function Code	Parameter name	Setting Range	Unit	Default	Commission
F6-00	Start mode	0 : Direct start 1 : Rotational speed tracking restart 2 : Pre-excited start (asynchronous motor)	N.A	0	
F6-03	Startup frequency	0.0 to 10.0	Hz	1.0	
F6-04	Startup frequency active set time	0.0 to 100.0	Sec	0.3	
F6-05	DC injection 1 level	0 to 150	%	0	
F6-06	DC injection 1 active set time	0.0 to 5.0	Sec	0	
F6-07	Acceleration/Deceleration mode	0 : Linear acceleration/ deceleration 3: S-curve acceleration/ deceleration C	N.A	3	
F6-08	Time proportion of S-curve at Accel start	0.0% to Min[(100.0% - F6-09), 80%]	%	80.0	
F6-09	Time proportion of S-curve at Accel end	0.0% to Min[(100.0% - F6-08), 80%]	%	10.0	
F6-10	Stop mode	0 : Decelerate to stop 1 : Coast to stop	N.A	0	
F6-11	DC injection 2 frequency threshold	0.00 Hz to maximum frequency	Hz	0.50	
F6-12	DC Injection 2 delay ON set time	0.0 to 36.0	Sec	0.0	
F6-13	DC injection 2 level	0 to 150	%	30	
F6-14	DC injection 2 active set time	0.0 to 5.0	Sec	0.5	
F6-26	Time proportion of S-curve at Decel start	0.0% to Min[(100.0% - F6-27), 80%]	%	20.0	
F6-27	Time proportion of S-curve at Decel end	0.0% to Min[(100.0% - F6-26), 80%]	%	30.0	

5.8 Group F7: product and software version checking

Function Code	Parameter name	Setting Range	Unit	Default	Commission
F7-08	Product number	N.A.	N.A.	380.00	display
F7-10	Performance software version	N.A.	N.A.	312.xx	display
F7-11	Functional software version	N.A.	N.A.	312.xx	display
F7-15	Performance software temporary version	N.A.	N.A.	0.00	display
F7-16	Functional software temporary version	N.A.	N.A.	0.00	display

5.9 Group F8: auxiliary functions

Function Code	Parameter Name	Setting Range	Unit	Default	Commission
F8-04	Deceleration time 2	0.0 to 6500.0	sec	2.0	
F8-26	Frequency switchover point between deceleration time 1 and deceleration time 2	0.00 to maximum frequency	Hz	0.00	
F8-55	Brake release current threshold	0 to 200	%	5	
F8-56	Brake release frequency threshold	0.00 to 25.00	Hz	0	
F8-57	Brake release delay ON set time	0.0 to 5.0	sec	0.0	
F8-58	Brake apply frequency threshold	0.00 to 25.00	Hz	0.50	
F8-59	Brake apply delay OFF set time	0.0 to 5.0	Sec	0.2	
F8-60	Drive run delay ON set time	0.20 to 10.00	Sec	0.20	
F8-61	MC contactor delay OFF set time	0.00 to 10.00	Sec	0.20	

5.10 Group F9: fault and protection

Function Code	Parameter Name	Setting Range	Unit	Default	Commission
F9-00	Motor thermal protection enable selection	0: disable motor thermal protection; 1: enable motor thermal protection	N.A	1	
F9-01	Motor thermal protection coefficient	0.1 to 10.00	N.A	1.00	
F9-02	Motor thermal protection pre-warning coefficient	50 to 99	%	80	
F9-07	Ground fault detection Enable	0: Disable; 1: Enable detection upon power on; 2: Enable detection upon power on and upon start;	N.A	2	
F9-08	Braking operation voltage level	700 to 800	V	750	
F9-09	Fault auto reset times	0 to 20	N.A	0	
F9-11	Time interval of fault auto reset	0.1 to 100.0	Sec	1.0	
F9-13	Drive output phase loss detection Enable	0: Disable; 1: Enable detection during running; 2: Enable detection upon start and during running	N.A	2	
F9-14	1st fault type	0 to 51	N.A.	N.A.	
F9-15	2nd fault type	0 to 51	N.A.	N.A.	
F9-16	3rd (latest) fault type	0 to 51	N.A.	N.A.	
F9-17	Frequency upon 3rd fault	N.A.	Hz	N.A.	
F9-18	Current upon 3rd fault	N.A.	A	N.A.	
F9-19	Bus voltage upon 3rd fault	N.A.	V	N.A.	

Function Code	Parameter Name	Setting Range	Unit	Default	Commission
F9-20	Input terminal status upon 3rd fault	N.A.	N.A.	N.A.	
F9-21	Output terminal status upon 3rd fault	N.A.	N.A.	N.A.	
F9-22	AC drive status upon 3rd fault	N.A.	N.A.	N.A.	
F9-23	Power-on time upon 3rd fault	N.A.	N.A.	N.A.	

5.11 Group FC: multi-reference

Function Code	Parameter name	Setting Range	Unit	Default	Commission
FC-00	Reference 0	0.0 to 100.0	%	10.0%	
FC-01	Reference 1	0.0 to 100.0	%	100.0%	
FC-02	Reference 2	0.0 to 100.0	%	11.0%	
FC-03	Reference 3	0.0 to 100.0	%	12.0%	
FC-04	Reference 4	0.0 to 100.0	%	40.0%	
FC-05	Reference 5	0.0 to 100.0	%	13.0%	
FC-06	Reference 6	0.0 to 100.0	%	14.0%	
FC-07	Reference 7	0.0 to 100.0	%	15.0%	
FC-08	Reference 8	0.0 to 100.0	%	20.0%	

Attention!

F4-02 to F4-04 and F4-06 Multi-Reference					
Preset Reference Selector		F4-02	F4-03	F4-04	F4-06
FC-00 : Reference 0	0	OFF	OFF	OFF	OFF
FC-01 : Reference 1	1	ON	OFF	OFF	OFF
FC-02 : Reference 2	2	OFF	ON	OFF	OFF
FC-03 : Reference 3	3	ON	ON	OFF	OFF
FC-04 : Reference 4	4	OFF	OFF	ON	OFF
FC-05 : Reference 5	5	ON	OFF	ON	OFF
FC-06 : Reference 6	6	OFF	ON	ON	OFF
FC-07 : Reference 7	7	ON	ON	ON	OFF
FC-08 : Reference 8	8	OFF	OFF	OFF	ON

5.12 Group FF: drive parameters

Function Code	Parameter name	Setting Range	Unit	Default	Commission
FF-00	Factory password	0 to 65535	N.A.	0	
FF-01	Drive code	1 to 537	N.A.	Model dependent	
FF-02	G/P type selection	1: G type; 2: P type	N.A.	1	
FF-03	Drive rated power	0 to 6553.5	N.A.	Model dependent	dis

5.13 Group FP: function code management

Function Code	Parameter name	Setting Range	Unit	Default	Commission
FP-00	User password	0 to 65535	N.A.	0	
FP-01	Parameter initialization	0: No operation 01: Restore factory settings except motor parameters 02: Clear records 04: Restore user backup parameters 501: Back up current user parameters	N.A.	0	
FP-03	Parameter display selection	7-segment			
		0 0	N.A.	00	

Modified parameters:
0: No display
1: Display

Customized parameters:
0: No display
1: Display

5.14 Group A5: control optimization

Function Code	Parameter name	Setting Range	Unit	Default	Commission
A5-06	Under voltage threshold	60.0 to 140.0	%	60.0	100% is 350V
A5-09	Overvoltage tripping level	200.0 to 2500.0	V	810	

5.15 Group U0: monitoring

Function Code	Parameter name	Setting Range	Unit	Default	Commission
U0-00	Running frequency	N.A.	Hz	N.A.	
U0-01	Set frequency	N.A.	Hz	N.A.	
U0-02	Bus voltage	N.A.	V	N.A.	
U0-03	Output voltage	N.A.	V	N.A.	
U0-04	Output current	N.A.	A	N.A.	
U0-05	Output power	N.A.	kW	N.A.	
U0-06	Output torque	N.A.	%	N.A.	
U0-07	DI state	N.A.	N.A.	N.A.	
U0-08	DO state	N.A.	N.A.	N.A.	
U0-09	AI1 voltage	N.A.	V	N.A.	
U0-10	AI2 voltage	N.A.	V	N.A.	
U0-11	AI3 voltage	N.A.	V	N.A.	
U0-41	DI state visual display	N.A.	N.A.	N.A.	
U0-42	DO state visual display	N.A.	N.A.	N.A.	
U0-65	Torque upper limit	N.A.	%	N.A.	

6 Trouble shooting

6.1 Inverter fault codes

Display	Fault Name	Possible Causes	Solutions
Err02	Overcurrent during acceleration	<ol style="list-style-type: none"> 1. The output circuit is short circuited. 2. The acceleration time is too short. 3. Manual torque boost or V/F curve is not appropriate. 4. The power supply is too low. 5. The startup operation is performed on the rotating motor. 6. A sudden load is added during acceleration. 7. The AC drive model is of too small power class. 	<ol style="list-style-type: none"> 1: Eliminate short circuit. 2: Increase the acceleration time F0-17. 3: Adjust the manual torque boost or V/F curve. 4: Check that the power supply is normal. 5: Select speed tracking restart or start the motor after it stops. 6: Remove the added load. 7: Select a drive of higher power class.
Err03	Overcurrent during deceleration	<ol style="list-style-type: none"> 1. The output circuit is short circuited. 2. The deceleration time is too short. 3. The power supply is too low. 4. A sudden load is added during deceleration. 5. The braking resistor is not installed. 	<ol style="list-style-type: none"> 1: Eliminate short circuit. 2: Increase the deceleration time F0-18. 3: Check the power supply, and ensure it is normal. 4: Remove the added load. 5: Install the braking resistor.
Err04	Overcurrent at constant speed	<ol style="list-style-type: none"> 1. The output circuit is short circuited. 2. The power supply is too low. 3. A sudden load is added during operation. 4. The AC drive model is of too small power class. 	<ol style="list-style-type: none"> 1: Eliminate short circuit. 2: Adjust power supply to normal range. 3: Remove the added load. 4: Select a drive of higher power class.
Err05	Overvoltage during acceleration	<ol style="list-style-type: none"> 1. The DC bus voltage is too high[☆]. 2. An external force drives the motor during acceleration. 3. The acceleration time is too short. 4. The braking resistor is not installed. 	<ol style="list-style-type: none"> 1: Replace with a proper braking resistor. 2: Cancel the external force or install braking resistor. 3: Increase the acceleration time. 4: Install a braking resistor.
Err06	Overvoltage during deceleration	<ol style="list-style-type: none"> 1. The DC bus voltage is too high[☆]. 2. An external force drives the motor during deceleration. 3. The deceleration time is too short. 4. The braking resistor is not installed. 	<ol style="list-style-type: none"> 1: Replace with a proper braking resistor. 2: Cancel the external force or install braking resistor. 3: Increase the deceleration time. 4: Install the braking resistor.
Err07	Overvoltage at constant speed	<ol style="list-style-type: none"> 1. The DC bus voltage is too high[☆]. 2. An external force drives the motor during deceleration. 	<ol style="list-style-type: none"> 1: Replace with a proper braking resistor. 2: Cancel the external force.
☆: Voltage thresholds			
Voltage Class	DC Bus Overvoltage threshold	DC Bus Undervoltage threshold	Braking operation level
Three-phase 220 V	400VDC	200VDC	380VDC
Three-phase 380 V	810VDC	350VDC	750VDC
Err08	Control power fault	The input voltage exceeds the allowed range.	Adjust the input voltage to within the allowed range.

Display	Fault Name	Possible Causes	Solutions
Err09	Undervoltage	<ol style="list-style-type: none"> 1. Instantaneous power failure occurs. 2. The input voltage exceeds the allowed range 3. The DC bus voltage is too low[☆]. 4. The rectifier bridge and buffer resistor are faulty. 5. The drive board is faulty. 6. The control board is faulty. 	<ol style="list-style-type: none"> 1: Reset the fault. 2: Adjust the input voltage to within the allowed range. 3 to 6: Seek for maintenance.
Err10	Drive overload	<ol style="list-style-type: none"> 1. The load is too heavy or the rotor is locked. 2. The drive is of too small power class. 	<ol style="list-style-type: none"> 1: Reduce the load, or check the motor, or check the machine whether it is locking the rotor. 2: Select a drive of higher power class.
Err11	Motor overload	<ol style="list-style-type: none"> 1. F9-01 is too small. 2. The load is too heavy or the rotor is locked. 3. The drive is of too small power class. 	<ol style="list-style-type: none"> 1: Set F9-01 correctly. 2: Reduce load, or check motor, or check the machine whether it is locking the rotor. 3: Select a drive of larger power class.
Err12	Power input phase loss	<ol style="list-style-type: none"> 1. The three-phase power supply is abnormal. 2. The drive board is faulty. 3. The lightning protection board is faulty. 4. The control board is faulty. 	<ol style="list-style-type: none"> 1: Check the power supply. 2 to 4: Seek for maintenance.
Err13	One drive output phase loss	<ol style="list-style-type: none"> 1. The cable between drive and motor is faulty. 2. The drive's three-phase output is unbalanced when the motor is running. 3. The drive board is faulty 4. The IGBT is faulty. 	<ol style="list-style-type: none"> 1: Check the cable. 2: Check the motor windings. 3 to 4: Seek for maintenance.
Err14	IGBT overheat	<ol style="list-style-type: none"> 1. The ambient temperature is too high. 2. The air filter is blocked. 3. The cooling fan is damaged. 4. The thermal sensor of IGBT is damaged. 5. The IGBT is damaged. 	<ol style="list-style-type: none"> 1: Reduce the ambient temperature. 2: Clean the air filter. 3 to 5: Seek for maintenance.
Err15	External equipment fault	<ol style="list-style-type: none"> 1. External fault signal is input via DI. 2. External fault signal is input via VDI. 	Reset the fault.
Err16	Communication fault	<ol style="list-style-type: none"> 1. The host computer is abnormal. 2. The communication cable is faulty. 3. The extension card type set in F0-28 is incorrect. 4. The communication parameters in group FD are set improperly. 	<ol style="list-style-type: none"> 1: Check cabling of the host computer. 2: Check the communication cabling. 3: Set F0-28 correctly. 4: Set the communication parameters properly.
Err18	Current detection fault	The drive board is faulty.	Replace the drive board.
Err19	Motor tuning fault	<ol style="list-style-type: none"> 1. Motor parameters are wrong. 2. Motor tuning overtime. 	<ol style="list-style-type: none"> 1. Check motor parameters F1-00 to F1-05. 2. Check the wiring between drive and motor.
Err21	EEPROM read-write fault	The EEPROM chip is damaged.	Replace the main control board.
Err23	Short circuit to ground	The motor is short-circuited to ground.	Replace the cables or motor.
Err26	Accumulative running time reached	The accumulative running time reaches the setting of F8-17.	Clear the record by performing param initialization (set FP-01 to 2).

Display	Fault Name	Possible Causes	Solutions
Err27	User-defined fault 1	1. The user-defined fault 1 signal is input via DI. 2. User-defined fault 1 signal is input via VDI.	Reset the fault.
Err28	User-defined fault 2	1. The user-defined fault 2 signal is input via DI 2. The user-defined fault 2 signal is input via VDI.	Reset the fault.
Err29	Accumulative power-on time reached	The accumulative power-on time reaches the setting of F8-16.	Clear the record by performing parameter initialization (set FP-01 to 2).
Err30	Off load fault	Offload when it's running.	Check the connection between motor and load.
Err31	PID feedback lost during running	The PID feedback is lower than FA-26.	Check the PID feedback signal or set FA-26 to a proper value.
Err40	Quick current limit	1. The load is too heavy or the rotor is locked. 2. The drive is of too small power class.	1: Reduce the load, or check the motor, or check the machine whether it is locking the rotor. 2: Select a drive of higher power class.
Err41	Motor switchover fault during running	The current motor is switched over via a terminal during running of the AC drive.	Switch over the motor only after the AC drive stops.
Err61	Two or three drive output phases loss	1. The drive output connections get loose; 2. The output contactor gets wrongly operated or malfunctions.	1. Check drive output connections; 2. Check drive output contactor.

6.2 Inverter common symptoms and diagnostics

Fault Name	Possible Causes	Solutions
There is no display at power-on.	<ol style="list-style-type: none"> 1. There is no power supply or the power supply is too low. 2. The switching power supply on the drive board is faulty. 3. The rectifier bridge is damaged. 4. The buffer resistor of the drive is damaged. 5. The control board or the keypad is faulty. 6. The cable between the control board and the drive board or keypad breaks. 	<ol style="list-style-type: none"> 1: Check the power supply. 2 to 5: Seek for maintenance. 6: Re-connect the 4-core and 28-core flat cables, or seek for maintenance.
"HC" is displayed at power-on.	<ol style="list-style-type: none"> 1. The cable between the drive board and the control board is in poor contact. 2. The control board is damaged. 3. The motor winding or the motor cable is short-circuited to the ground. 4. The power supply is too low. 	<ol style="list-style-type: none"> 1: Re-connect the 4-core and 28-core flat cables, or seek for maintenance. 2: Seek for maintenance. 3: Check the motor or replace it, and check the motor cable. 4. Check the power supply according to chapter 1.3.
The display is normal upon power-on, but "HC" is displayed after start and the motor stops immediately.	<ol style="list-style-type: none"> 1. The cooling fan is damaged or the rotor is locked. 2. A certain terminal is short-circuited. 	<ol style="list-style-type: none"> 1: Replace cooling fan, or check the machine whether it is locking the rotor. 2: Eliminate short circuit.
Err14 is reported frequently.	<ol style="list-style-type: none"> 1. The carrier frequency is set too high. 2. The cooling fan is damaged, or the air filter is blocked. 3. Components (thermal coupler or others) inside the drive are damaged. 	<ol style="list-style-type: none"> 1: Reduce F0-15. 2: Replace the fan and clean the air filter. 3: Seek for maintenance.
The motor does not rotate after the AC drive outputs a non-zero reference.	<ol style="list-style-type: none"> 1. The motor or motor cable is damaged. 2. The motor parameters are set improperly. 3. The cable between the drive board and the control board is in poor contact. 4. The drive board is faulty. 5. The rotor is locked. 	<ol style="list-style-type: none"> 1: Check the motor, or check the cable between the drive and the motor. 2: Check and re-set motor parameters. 3: Re-connect the 4-core and 28-core flat cables, or seek for maintenance. 4: Seek for maintenance. 5: Check the machine whether it is locking the rotor.
The DI terminals are disabled.	<ol style="list-style-type: none"> 1. The DI parameters are set incorrectly. 2. The input signal is incorrect. 3. The wire jumper between OP and +24V is in poor contact. 4. The control board is faulty. 	<ol style="list-style-type: none"> 1: Check and reset DI parameters in group F4. 2: Check the input signals, or check the input cable. 3: Check the jumper between OP and +24 V. 4: Seek for maintenance.
The drive reports overcurrent and overvoltage frequently.	<ol style="list-style-type: none"> 1. The motor parameters are set improperly. 2. The acceleration/deceleration time is too small. 3. The load fluctuates. 	<ol style="list-style-type: none"> 1: Reset motor parameters. 2: Set proper acceleration/deceleration time. 3: Check the machine, or seek for maintenance.

Revision History

Revision	Date	Revising Author	Description
0.0	25 th MAR'2014	Xiong Fei	Related firmware version: F7-10=312.00 and F7-11=312.02
0.1	17 th APR'2014	Xiong Fei	<ol style="list-style-type: none"> 1. Related firmware version: F7-10=312.01 and F7-11=312.04. 2. Add mounting hole dimensions into General specifications; 3. Revise Connection diagram; 4. Add motor thermal protection function codes and some others into function parameters; 5. Correct some items in Elevator quick commissioning; 6. Add motor auto-tuning steps into Elevator quick commissioning.
0.2	18 th JUN'2014	Xiong Fei	<ol style="list-style-type: none"> 1. Related firmware version: F7-10=312.01 and F7-11=312.05. 2. Add nameplate and designation rule; 3. Add MD38IO1 into wiring diagram; 4. Add operation panel into quick setup; 5. Improve setup flowchart; 6. Improve trouble shooting; 7. Add extension cards;
0.3	08 th JUL'2014	Xiong Fei & Subra & Arut	<ol style="list-style-type: none"> 1. Related firmware version: F7-10=312.01 and F7-11=312.05; 2. Simplify wiring diagram, remove Elevator controller block; 3. Add 'IGBT Enable' function into Chapter 3; 4. MD38IO1 shows as pre-fitted extension I/O card.
0.4	15 th JAN'2015	Xiong Fei	<ol style="list-style-type: none"> 1. Related firmware version: F7-10=312.03 and F7-11=312.06; 2. Revise the ratings of recommended braking resistors; 3. Add current loop gain parameters (F2-13 to 16); 4. Add overcurrent stall prevention parameters (F3-19 to 20); 5. Add software temporary version parameters (F7-15 to 16); 6. Add factory parameters (FF-00 to 03); 7. Revise protection parameters F9-03, F9-04, F9-07 and F9-13; 8. Add fault code Err61 (Two or three drive output phases loss); 9. Revise the name of Err13(One drive output phase loss); 10. Revise braking operation level from 770VDC to 750VDC; 11. Revise DC injection active time range F6-06 and F6-14; 12. Revise S curve time proportion range F6-08, 09, 26, and 27; 13. Revise default values of F8-55, 56, 57; 14. Revise wiring diagram, move MC and Brake to TA/TB/TC and PA/PB/PC; 15. Revise auto-tuning methods F1-37; 16. Revise F5-01, F5-02, F5-03, F5-04, re-arrange digital outputs; 17. Revise IGBT enable description(DO active mode setting);
0.5	8 th JUL'2015	Xiong Fei	<ol style="list-style-type: none"> 1. Related firmware version: F7-11=312.07; 2. Revise description of IGBT Enable; 3. Add F3-22 to 25, F9-08, FP-03 4. Change F0-15, F3-23, F6-05, F6-13; 5. Revise wiring diagram, add phase monitor relay and MC relay to DI6; 6. Adjust the chapter sequence; 7. Add DI7 as multi-reference in wiring diagram;

Inova Automation Co., Limited

Address: Unit B01, 17/FMG Tower, 133 Hoi Bun Road, Kwun Tong, Hong Kong

Tel: (852) 2751 6080

Fax: (852) 2751 6933

Email: info@inova-automation.com

[Http://www.inovance.cn](http://www.inovance.cn)